

Change of combination

Preset from factory is set to 0-0-0

To change combination

1. Pull out the wire
2. Press the small circular pin inward (located at the bottom)
3. Set your new combination
4. Press the button at the top to lock your new code
5. Push the wire back to initial position and scramble the digits to lock

Brugsanvisning

Koden fra fabrikken er 0-0-0

Skift koden

1. Åben wiren
2. Pres den lille cirkulære stift indad (placeret i bunden)
3. Angiv din nye kombination
4. Pres den aflange knap foroven ned for at låse din nye kode
5. Sæt wiren tilbage i startposition og bland numrene for at låse hængelåsen

